



 



 

 
 
 

 

 

 

 

 


 


 


 
 
 









 



 





 





 










 
 




Original	Replacement	Original	Replacement
 Power	 Power	 Internet/PIP	 Media
 HDMI/Control	 Smart	 1	 1
 Rec	 Rec	 2	 2
 Stop	 Stop	 3	 3
 Play	 Play	 4	 4
 Pause	 Pause	 5	 5
 <<	 <<	 6	 6
 >>	 >>	 7	 7
 1<<	 1<<	 8	 8
 >>1	 >>1	 9	 9
 Red/Zoom/↑ ↓	 Red	 0	 0
 Green/Repeat/↓	 Green	 Text	 Text
 Yellow/Root	 Yellow	 Info	 Info
 Blue/Title	 Blue	 Source	 AV
 Screen	 Format	 OK	 Ok
 Lang	 Dual	 Up	 Up
 Subtitle	 Subt	 Down	 Down





Original	Replacement	Original	Replacement
 Right	 Right		
 Left	 Left		
 P+	 Ch +		
 P-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Menu	 Menu		
 Mute	 Mute		
 Return	 Back		
 Swap	 Pre Ch		
 FAV	 Shift + Pre Ch		
 EPG	 Guide		
 Sleep	 Sleep		
 Search Mode	 Shift + AV		
 Ball/Angle	 Options		
 Display	 Shift + Info		
 Presets	 TV/R		

