
 
 


 
 

 


 

 





 
 


 

 
 

 
 




 


Original	Replacement	Original	Replacement
PWR On/Off	 Power	Exit	 Exit
Mute	 Mute	Menu Down	 Down
Epg	 +  Shift + Guide	Back	 Back
Info	 Info	Audio	 Dual
App	 Media	Volume+	 Vol +
Subt.List	 Subt	CH/Page+	 Ch +
Sleep Timer	 Sleep	Volume-	 Vol -
Opt?	 Options	CH/Page-	 Ch -
Video	 Smart	1. ?	 1
Text	 Text	2abc	 2
Menu Up	 Up	3def	 3
TV	 TV/R	4ghi	 4
Menu	 Menu	East	 List
Menu Left	 Left	5jkl	 5
OK Enter	 Ok	6mno	 6
TV/SAT	 AV	Menu Right	 Format
Menu Right	 Right		 3D



Original	Replacement	Original	Replacement
H/V Play	 Play		
LNB F.Forward	 >>		
Lang./Rewind	 <<		
7pqrm	 7		
8tuv	 8		
9wxyz	 9		
Guide Pilote	 GUIDE		
0/10	 0		
FAV Pref.	 FAV PRE-CH		
Red	 A		
Green	 B		
Yellow	 C		
Blue	 D		
Freeze	 ■		
Dec/Pause			

