 
 




Original	Replacement	Original	Replacement
 Power	 Power	 -/--	 Shift + Guide
 Mute	 Mute	 Recall	 Back
 TV/AV	 AV	 Ratio	 Format
 Red	 Red	 Size	 Eject
 Green/P.Mode	 Green	 Subpage	 Shift + Subt
 Yellow	 Yellow	 Menu	 Menu
 Blue/S.Mode	 Blue	 P+	 Ch +
 1	 1	 P-	 Ch -
 2	 2	 Vol+	 Vol +
 3	 3	 Vol-	 Vol -
 4	 4	 Sleep	 Sleep
 5	 5	 Exit	 Exit
 6	 6	 Display	 Shift + Info
 7	 7	 Tv/Radio	 TV/R
 8	 8	 Subtitle	 Subt
 9	 9	 Pause	 Pause
 0	 0	 Up	 Up

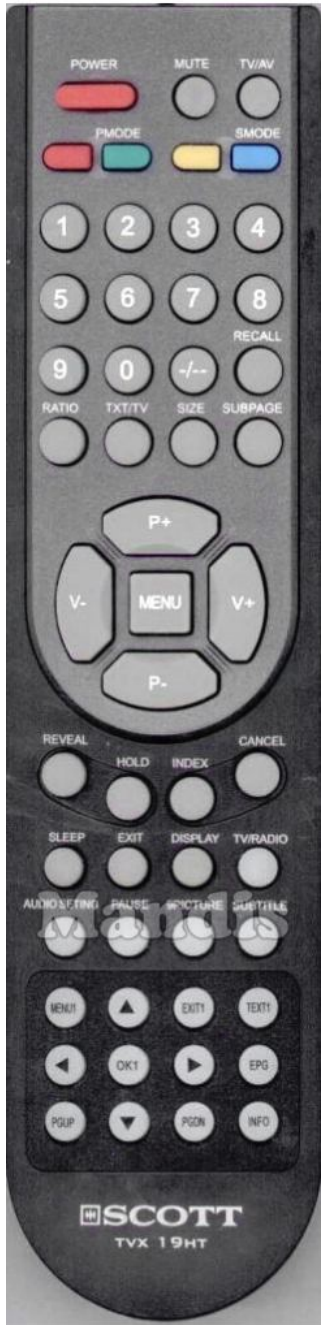



Original		Replacement	
	OK1		Ok
	Down		Down
	Right		Right
	Left		Left
	Menu1	 + 	Shift + Menu
	Exit1	 + 	Shift + Exit
	TXT/TV		Text
	Text1	 + 	Shift + Text
	Info		Info
	EPG		Guide
	PgUp		>>
	PgDn		<<
	Picture	 + 	Shift + Format
	Audio Seting		Dual
	Reveal		Smart
	Index		3D
	Hold		Options

Original		Replacement	
	Cancel	 + 	Shift + Back

