



 





 










 

 



 



 

 



 



 


 
 


 
 

 

 


 
 

 

 


 


 




Original		Replacement		Original		Replacement	
	Power		Power		0		0
	M		Menu		Recall		Pre Ch
	OK		Ok		-/--		Guide
	i		Info		[<>]		Format
	Up		Up		Mute		Mute
	Down		Down		I-II		Dual
	Right		Right		TV		TV/R
	Left		Left		Exit		Exit
	1		1		Prog+		Ch +
	2		2		Prog-		Ch -
	3		3		Vol+		Vol +
	4		4		Vol-		Vol -
	5		5		Red		Red
	6		6		Green		Green
	7		7		Yellow		Yellow
	8		8		Blue		Blue
	9		9		[≡]		Text





Original		Replacement		Original		Replacement	
	[≡o]		Options				
	[≡+]		Smart				
	[≡x]		Subt				
	[.≡]		AV				
	[≡◆]		List				
	[≡?]		Media				
	[≡i]		Back				

