
 

 
 








 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	DTV		Smart
	Radio		TV/R
	USB		Options
	DVD		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Tv Guide		Guide
	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	P.Mode		Format
	S.Mode		Shift + Dual
	FAV		Pre Ch
	CH +		Ch +
	CH -		Ch -
	Menu		Menu
	Exit		Exit
	Info		Info
	Source		AV
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok





Original	Replacement
Sleep	Sleep
Aspect	3D
Subtitle	Subt
Text	Text
Audio	Dual
Text Hold	+  Shift + Text
Zoom / Text	Eject
Power / Display	+  Shift + Power
Rec / DVD Menu	Rec
I<<	I<<
>>I	>>I
Stop / Eject	Stop
<<	<<
>>	>>
Play	Play
Pause	Pause
Rec List / DVD Setup	List

Original	Replacement
Red / Goto	Red
Green / A-B	Green
Yellow / Angle	Yellow
Blue / Repeat	Blue

