 




 



 





 

 

 

 



 










 

 


 


 
 
 
 

 

 

 




 

 
 






Original	Replacement	Original	Replacement
	Power		Power
	Input		AV / Input / RDS
	TV/DVD		TV/Radio /
	DTV/ATV		Smart / List
	EPG		Guide / EPG / -/-
	[<>]		Picture / Format
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	Vol+		Vol+
	4		4
	5		5
	6		6
	Vol-		Vol-
	7		7
	8		8
	9		9
	P+		CH+ / Page+
	[i+]		Info / Angle
	0		0
	Recall		Fav / Marker / PC
	P-		CH- / Page-
	Red/Left Skip		Red / Netflix / Search
	Green/Left Rev		Green / APP / Repeat
	Yellow/Right FWD		Yellow / YouTube / Repeat
	Blue/Right Skip		Blue / Prime Video / Random
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	Setup/Tv Menu		Setup / OPT /
	DVD Menu		Menu / Home
	Up		Up
	Left/Left Slow		Left



