






























 


 




 


 



 

























| Original  |       | Replacement   |                       | Original  |        | Replacement   |                       |
|---|-------|---|-----------------------|---|--------|---|-----------------------|
|    | Power |    | Power                 |    | 8      |    | 8                     |
|    | Mute  |    | Mute / Dimmer         |    | 9      |    | 9                     |
|    | Play  |    | Play / Slow           |    | 0      |    | 0                     |
|    | Pause |    | Pause / Step / Freeze |    | Info   |    | Info / Angle          |
|    | Stop  |    | Stop / Hold           |    | EPG    |    | Guide / EPG / -/-     |
|    | Rec   |    | Rec / Rec Mode        |    | ≡      |    | Menu / Home           |
|    | <<    |    | << / Tune-            |    | Source |    | AV / Input / RDS      |
|    | I<<   |    | I<< / Preset-         |    | Up     |    | Up                    |
|    | >>I   |    | >>I / Preset+         |    | Down   |    | Down                  |
|    | >>    |    | >> / Tune+            |    | Right  |    | Right                 |
|   | 1     |   | 1                     |   | Left   |   | Left                  |
|  | 2     |  | 2                     |  | OK     |  | OK                    |
|  | 3     |  | 3                     |  | Exit   |  | Exit / Cancel / Clear |
|  | 4     |  | 4                     |  | Smart  |  | Smart / List          |
|  | 5     |  | 5                     |  | ←      |  | Back / Return         |
|  | 6     |  | 6                     |  | Vol+   |  | Vol+                  |
|  | 7     |  | 7                     |  | P+     |  | CH+ / Page+           |



