



 

 

 

 

 













Original	Replacement	Original	Replacement
 Operate	 Power	 Show View	 Info / Angle
 Open / Close	 Eject / Surround	 TV / DVD	 TV/Radio /
 1	 1	 Timer On / Off	 Sleep / Timer
 2	 2	 Time Shift	 Text / Goto
 3	 3	 Dubbing	 Vol-
 CH +	 CH+ / Page+	 P in P	 Picture / Format
 4	 4	 Input	 AV / Input / RDS
 5	 5	 HDD	 Shift + 7
 6	 6	 Start Menu	 Menu / Home
 CH -	 CH- / Page-	 DVD	 Shift + 2
 7	 7	 Rec List / DVD Top Menu	 Smart / List
 8	 8	 Up	 Up
 9	 9	 Original / Playlist / DVD Menu	 D.Menu / Top
 Direct	 Setup / OPT /	 Left	 Left
 -/--	 Guide / EPG / -/--	 Set / Enter	 OK
 0	 0	 Right	 Right
 C / Erase	 Shift + Exit / Cancel / Clear	 Exit	 Exit / Cancel / Clear





Original	Replacement
	 Down
	 Back / Return
	 Blue / Prime Video / Random
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Pause / Step / Freeze
	 Stop / Hold
	 Shift + Slow / Play
	 I<< / Preset-
	 >>I / Preset+
	 Sound / Title
	 Shift + Red / Netflix / Search
	 Zoom / Size

Original	Replacement
	 Shift + Info / Angle
	 Audio / Lang I/II
	 Subtitle / EQ
	 Rec / Rec Mode
	 Shift + Stop / Stop
	 Shift + Pause / Step / Step
	 Shift + Rec / Rec Mode
	 Shift + Eject / Surround
	 Fav / Marker / PC
	 Vol+
	 Display / Media

