

 


















 

 























 





















 







 

 









Original	Replacement	Original	Replacement
 Power	 Power	 CD Stop	 Stop / Hold
 P.Scan	 TV/Radio /	 CD Repeat A-B	 Yellow / YouTube / Repeat
 1	 1	 CD Intro	 Subtitle / EQ
 2	 2	 Deck Sel A	 Shift + CH+ /
 3	 3	 Deck Play	 Shift + Play /
 4	 4	 Deck >>	 Shift + >> /
 5	 5	 Deck Pause	 Shift + Pause / Step /
 6	 6	 Deck Sel B	 Shift + CH- /
 7	 7	 Deck Rec	 Shift + Rec / Rec Mode
 8	 8	 Deck Play	 Shift + I<< / Preset-
 9	 9	 Deck <<	 Shift + << /
 0	 0	 Deck Stop	 Shift + Stop /
 CD Disc	 Eject / Surround	 Equalizer Preset	 Up
 CD Play	 Play / Slow	 Equalizer User	 Right
 CD Pause	 Pause / Step / Freeze	 Equalizer File	 Down
 CD I<<	 I<< / Preset-	 Equalizer T.Mon	 Left
 CD >>I	 >>I / Preset+	 Equalizer Display	 OK





Original	Replacement	Original	Replacement
 Input Selector CD	 Shift + 3	 Master Down	 Vol-
 Input Selector Tuner	 Shift + 6	 Display Sys	 Display / Media
 Input Selector Video 1	 Shift + 4	 Sleep	 Sleep / Timer
 Input Selector	 Shift + 7	 CH Level Down	 CH- / Page-
 Input Selector Tape Mon.	 Shift + 5	 Mute	 Mute / Dimmer
 Input Selector Video 2	 Shift + 8		
 Stereo	 Audio / Lang I/II		
 Input Selector 6 CH Direct	 Shift + 1		
 Input Selector Video 3	 Shift + 9		
 Auto	 Smart / List		
 DSP Mode	 Menu / Home		
 T.Tone	 Text / Goto		
 CH Level Up	 CH+ / Page+		
 CH Sel.	 Info / Angle		
 Master Up	 Vol+		
 D.Time	 D.Menu / Top		
 Adjust	 Setup / OPT /		

