 







 
 


 
 
 

 

 

 



 

 

 
 
 

 



 
 




 

 
 




 
 
 



 


 


 










Original	Replacement	Original	Replacement
 Power	 Power	 8	 8
 Mute	 Mute	 9	 9
 Info	 Info	 0	 0
 Angle	 Back	 Time Shift	 Guide
 Copy	 Sleep	 Goto	 Pre Ch
 Zoom	 Eject	 Rec	 Rec
 Tv Sys	 TV/R	 Stop	 Stop
 Music	 Shift + Menu	 <</FR	 <<
 Setup	 Options	 >>/FF	 >>
 Menu	 Menu	 Play/Pause	 Play
 1	 1	 >>I/Next	 >>I
 2	 2	 Subtitle	 Subt
 3	 3	 Audio	 Dual
 4	 4	 I<</Prev	 I<<
 5	 5	 A-B	 Shift + Play
 6	 6	 Repeat	 Text
 7	 7	 Vol+	 Vol +





Original	Replacement	Original	Replacement
 Vol-	 Vol -		
 Home	 Smart		
 X/Return	 Exit		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Wuaki TV	 AV		
 Select	 List		
 Red	 Red		
 Grenn/EPG	 Green		
 Yellow/TTX	 Yellow		
 Blue	 Blue		

