









 



 
















 



 















 




 



 






 




 



 

 

 









 

 



 







Original	Replacement	Original	Replacement
 Standby	 Power	 Stop	 Stop / Hold
 1	 1	 Play/Pause	 Play / Slow
 2	 2	 Play/Pause	 Pause / Step / Freeze
 3	 3	 I>/Resume	 Shift + Play /
 4	 4	 Surround	 Eject / Surround
 5	 5	 Sound	 Sound / Title
 6	 6	 Night	 Shift + Sleep / Timer
 7	 7	 Mute	 Mute / Dimmer
 8	 8	 Repeat	 Green / APP / Repeat
 9	 9	 Repeat A-B	 Yellow / YouTube / Repeat
 0	 0	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 DIM	 Shift + Mute / Dimmer
 Vol-	 Vol-	 Subw +	 Up
 Left	 Left	 Rear +	 Shift + CH+ /
 Right	 Right	 Center +	 CH+ / Page+
 I<<	 I<< / Preset-	 Tv Vol+	 Shift + Vol+
 >>I	 >>I / Preset+	 Subw -	 Down





Original	Replacement	Original	Replacement
	Standby		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down



