












 












 


 



 




 

 

 
 






 

 




Original	Replacement	Original	Replacement
On/Off	 Power	Menu Left	 Left
Top Menu	 +  Shift + Menu	OK Enter	 Ok
Audio Off	 Mute	Menu Right	 Right
Slow Down	 Ch -	Return	 Exit
Auto/Track	 Red	Menu Down	 Down
Slow Up	 Ch +	Progr.	 Back
Pause	 Pause	Volume+	 Vol +
Subt.	 Subt	Top Menu	 D. Menu
Rep/A-B	 +  Shift + Text	Next	 >>
Title	 List	Volume-	 Vol -
Repeat/1/All	 Text	1	 1
Stop	 Stop	Prev.	 <<
Zoom	 +  Shift + Eject	2	 2
DVD/TV	 AV	3	 3
Menu	 Menu	4	 4
Menu Up	 Up	Digest	 Blue
Display	 Info	5	 5



Original	Replacement	
Record	 Rec	
6	 6	
7	 7	
Pbc	 Yellow	
R/L	 Green	
8	 8	
Resume	 +  Shift + Play	
9	 9	
Karaoke/Step	 +  Shift + Pause	
F.Forward	 >>	
Play/Back	 Smart	
Open/Close	 Eject	
Audio	 +  Shift + Dual	
+10	 Guide	
Timer	 Sleep	
Play	 Play	
Rewind	 <<	

Original	Replacement	
0	 0	
Setup	 Options	
C/CH	 Pre Ch	
Input Source	 +  Shift + AV	
Echo+	 +  Shift + Ch +	
Echo-	 +  Shift + Ch -	
Info	 +  Shift + Info	
Angle	 Format	
Lang	 Dual	
Shuffle	 TV/R	
Random	 +  Shift + TV/R	

