




 



































 



 



 

 

 

 







 








Original	Replacement	Original	Replacement
 Power	 Power	 Home	 Smart
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Menu	 Menu
 3	 3	 Source	 AV
 4	 4	 Exit	 Exit
 5	 5	 Display	 Info
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 Enter	 Ok
 List	 List	 P.Mode	 Shift + Format
 Recall	 Back	 S.Mode	 Dual
 Vol+	 Vol +	 Sleep	 Sleep
 Vol-	 Vol -	 MTS	 Options
 Aspect	 3D	 Rec	 Rec





Original		Replacement		Original		Replacement	
	Guide		Guide		Size/Mouse		Format
	Red		Red		Hold/Refresh		D. Menu
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				
	<</Index		<<				
	Play		Play				
	Pause/Cancel		Pause				
	>>		>>				
	I<</Sub.PG		I<<				
	>>I/Reveal		>>I				
	Stop/Mix		Stop				
	TTX		Text				
	CAP		Media				
	Subtitle		Subt				
	Tv/Radio		TV/R				
	FAV		Pre Ch				

