



 

 

 

 



 

 

 

 











 







































| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|      | Power       |      | Power                 |
|      | Mute        |      | Mute / Dimmer         |
|      | 1           |      | 1                     |
|      | 2           |      | 2                     |
|      | 3           |      | 3                     |
|      | 4           |      | 4                     |
|      | 5           |      | 5                     |
|      | 6           |      | 6                     |
|      | 7           |      | 7                     |
|      | 8           |      | 8                     |
|     | 9           |     | 9                     |
|    | DTV / ATV   |    | D.Menu / Top          |
|    | 0           |    | 0                     |
|    | Recall      |    | Back / Return         |
|    | P.Mode      |    | Picture / Format      |
|    | S.Mode      |    | Sound / Title         |
|    | Sleep       |    | Sleep / Timer         |
|    | Vol +       |    | Vol+                  |
|    | MTS         |    | Audio / Lang I/II     |
|    | CH +        |    | CH+ / Page+           |
|    | Vol -       |    | Vol-                  |
|    | REC List    |    | Smart / List          |
|    | CH -        |    | CH- / Page-           |
|    | FAV List    |    | Fav / Marker / PC     |
|    | REC         |    | Rec / Rec Mode        |
|    | Freeze      |    | Pause / Step / Freeze |
|    | Menu        |    | Menu / Home           |
|   | Up          |   | Up                    |
|  | Source      |  | AV / Input / RDS      |
|  | Left        |  | Left                  |
|  | Enter       |  | OK                    |
|  | Right       |  | Right                 |
|  | Exit        |  | Exit / Cancel / Clear |
|  | Down        |  | Down                  |



