





 

 
 

 


 


 
 





 
 

 



 



 

 


 










Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Clock Timer		Guide
	Clock Timer Set		Pre Ch
	Display		Info
	Tuner Memory		Options
	Play Mode / Tuning Mode		Shift + Play
	Repeat / FM Mode		Text
	USB		Red
	CD		Yellow
	Tuner / Band		Green
	Function		Menu
	- / I<<		I<<
	>>I / +		>>I
	<< / ←		<<
	→ / >>		>>
	Play		Play
	Pause		Pause
	Stop		Stop
	Clear		Exit
	Enter		Ok
	Vol +		Vol +
	Vol -		Vol -
	EQ		Dual
	Search		TV/R
	Folder +		Ch +
	Folder -		Ch -

