



Original	Replacement
Muting	Dimmer / Mute
Bass Level	Sound / Title
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Open/Close	Eject / Surround
Band	Picture / Format
Sleep	Sleep / Timer
Tv/Video	TV/Radio /
DVD Menu	D.Menu / Top

Original	Replacement
Name	Text / Goto
AMP Menu	Menu / Home
Angle	Info / Angle
Enter	OK
Clear	Exit / Cancel / Clear
Return	Back / Return
Volume	Vol+
Memory	Smart / List
Vol-	Vol-
Display	Display / Media
1	1
2	2





Original	Replacement
	3
	4
	5
	6
	7
	8
	9
	Guide / EPG / -/--
	0
	Green / APP / Repeat
	+  Shift + Play /
	+  Shift + Audio / Lang I/II
	+  Shift + Setup / OPT / Tools
	+  Shift + Menu /
	+  Shift + Vol+
	+  Shift + Smart / List
	+  Shift + Vol-

Original	Replacement
	+  Shift + 1
	+  Shift + 2





	Original	Replacement		Original	Replacement
	Power Tv		Power		
	1		1		
	2		2		
	3		3		
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	0/10		0		
	-/--		Guide / EPG / -/--		
	Enter		OK		
	Tv Vol+		Vol+		
	Tv CH+		CH+ / Page+		
	Tv Vol-		Vol-		
	Tv CH-		CH- / Page-		

