

 





 

 
 
 



 

 

 

 

 



 

 


 




 







Original	Replacement
 Open/Close	 Eject / Surround
 DVD	 Shift + 2
 Video	 Shift + 4
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog / Tracking +	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog / Tracking -	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input	 AV / Input / RDS
 Angle	 Info / Angle

Original	Replacement
 0	 0
 Set	 Setup / OPT /
 TV / Video	 TV/Radio /
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 System Menu	 Shift + D.Menu / Top Menu
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Display	 Display / Media
 Up	 Up
 Original / Playlists	 Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return







 





 

 

 



 

 

 

 
 
 



 
 



Original	Replacement
 Down	 Down
 Options	 Shift + Setup / OPT / Tools
 I<<	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I	 >>I / Preset+
 << / <I	 << / Tune-
 Play	 Play / Slow
 I> / >>	 >> / Tune+
 Clear	 Exit / Cancel / Clear
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 →/Synchro Rec	 Fav / Marker / PC
 Rec Mode	 Shift + Rec / Rec Mode
 TV Vol +	 Vol+
 TV Prog +	 Shift + CH+ /

Original	Replacement
 TV Power	 Shift + Power
 TV Vol -	 Vol-
 TV Prog -	 Shift + CH- /
 TV Input	 Shift + AV / Input / RDS





Original	Replacement
 Open/Close	 Eject / Surround
 DVD	 Shift + 2
 Video	 Shift + 4
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input Select	 AV / Input / RDS
 Angle	 Info / Angle

Original	Replacement
 0	 0
 Set	 Text / Goto
 Tv/Video	 TV/Radio /
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 O))	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 System Menu	 Smart / List
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Display	 Display / Media
 Up	 Up
 Original / Playlist	 Shift + Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return







 
 
 
 


 

 

 
 
 
 


 

Original	Replacement
	Down
	Setup / OPT /
	I<< / Preset-
	+ Shift + Left
	+ Shift + Right
	>>I / Preset+
	<< / Tune-
	Play / Slow
	>> / Tune+
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Pause / Step / Freeze
	Stop / Hold
	Rec / Rec Mode
	Picture / Format
	+ Shift + Rec / Rec Mode
	Vol+

Original	Replacement
	Vol-







Original	Replacement
 Open/Close	 Eject / Surround
 DVD	 Shift + 2
 Video	 Shift + 4
 Power	 Power
 1	 1
 2	 2
 3	 3
 Prog+	 CH+ / Page+
 4	 4
 5	 5
 6	 6
 Prog-	 CH- / Page-
 7	 7
 8	 8
 9	 9
 Input Select	 AV / Input / RDS
 Angle	 Info / Angle

Original	Replacement
 0	 0
 Set	 Text / Goto
 Tv/Video	 TV/Radio /
 Top Menu	 D.Menu / Top
 Menu	 Menu / Home
 O))	 Audio / Lang I/II
 [...]	 Subtitle / EQ
 System Menu	 Smart / List
 Title List	 Sound / Title
 Timer	 Sleep / Timer
 Display	 Display / Media
 Up	 Up
 Original / Playlist	 Shift + Smart / List
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return





Original	Replacement
 Down	 Down
 Tools	 Setup / OPT /
 I<<	 I<< / Preset-
 ←	 Shift + Left
 →	 Shift + Right
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 -/--/Clear	 Exit / Cancel / Clear
 -/--/Clear	 Guide / EPG / -/--
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Rec	 Rec / Rec Mode
 Synchro Rec	 Picture / Format
 Rec Mode	 Shift + Rec / Rec Mode
 Vol+	 Vol+

Original	Replacement
 Vol-	 Vol-

