




 



 

 





 

 
 
 
 


 

 
 
 

 











 



















 







 
 
 

 

 

 

 
 
 


 
 
 
 
 



 




 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	▶▶		3D
	←		Back
	SAT		Smart
	Mute		Mute
	TV		TV/R
	[=]		Text
	→ / []		AV
	□ → / [?]		Shift + AV
	PIP / Split		Options
	PIP to Main		List
	PIP Swap / Split Swap		Pre Ch
	Split Hold		Shift + Pause
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/+		Guide
	C		Exit
	[=+]		Shift + Stop
	↑		Up
	Vol+		Vol +
	Vol-		Vol -
	Prog+		Ch +
	Prog-		Ch -
	Red		Red
	Green		Green
	Yellow		Yellow



 

 
 
 


 

 
 


 






Original	Replacement	Original	Replacement
	Blue		Blue
	[≡?][+]		Info
	↔◇		D. Menu
	[Ⓞ]		Sleep
	■		Shift + Format
	Aspect		Format
	♪		Dual
	+		Right
	-		Left
	Menu		Menu
	OK		Ok
	Power Down		Shift + Power
	Prog+ Down		Shift + Ch +
	Prog- Down		Shift + Ch -
	<<		<<
	Play		Play
	>>		>>

 

 

 






 
 


 
 





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 Ch +		
 Prog- Down	 Ch -		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 >>	 >>		
 Play	 Play		
 <<	 <<		





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 Ch +		
 Prog- Down	 Ch -		
 Stop	 Stop		
 Pause	 Pause		
 Rec	 Rec		
 >>	 >>		
 Play	 Play		
 <<	 <<		





Original	Replacement	Original	Replacement
Power Down	Power		
Prog+ Down	Ch +		
Prog- Down	Ch -		
<<	<<		
Play	Play		
>>	>>		
Stop	Stop		
Pause	Pause		
Rec	Rec		

