



| Original | | Replacement | | Original | | Replacement | |
|---|------------|---|--------------|---|-------|---|-------|
|  | Power |  | Power |  | Play |  | Play |
|  | Input |  | AV |  | Pause |  | Pause |
|  | Auto Sound |  | Smart |  | >>I |  | >>I |
|  | Standard |  | Options |  | I<< |  | I<< |
|  | Cinema |  | Media | | | | |
|  | Music |  | Dual | | | | |
|  | Voice |  | TV/R | | | | |
|  | Night |  | Exit | | | | |
|  | Vol+ |  | Vol + | | | | |
|  | Vol- |  | Vol - | | | | |
|  | Mute |  | Mute | | | | |
|  | Bass |  | Subt | | | | |
|  | Play Mode |  | Shift + Play | | | | |
|  | Audio |  | Shift + Dual | | | | |
|  | Up |  | Up | | | | |
|  | Down |  | Down | | | | |
|  | Enter |  | Ok | | | | |

