


 





Original	Replacement	Original	Replacement
	Power		Power
	Night Mode		Rec
	Tuner Menu		Menu
	Dynamic Bass		List
	Sleep		Sleep
	Sound Field-		Ch -
	Sound Field+		Ch +
	Muting		Mute
	DVD Menu		D. Menu
	Clear		Exit
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
>10 button icon"/>	>10		Guide
	Function		Smart
	Display		Info
	DVD Setup		Options
	Subtitle		Subt
	Vol+		Vol +
	Vol-		Vol -
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Return		Back
	Tv/Video		TV/R





Original	Replacement	Original	Replacement
	Dimmer		Format
	Pause		Pause
	Play/Select		Play
	Stop		Stop
	<</Tuning-/<l		<<
	Tuning+/Slow		>>
	>> /Preset+		>>
	<</Preset-		<<
	Audio		Dual
	Repeat		Text
	DVD Display		Media
	Enter		Pre Ch
	DVD Top Menu		Shift + Menu
	Band		3D
	Angle		Green
	Play Mode		Shift + Play





Original	Replacement	Original	Replacement
Power Tv	Power	Vol+	Vol +
Tv/Video	TV/R	Vol-	Vol -
Muting	Mute	Tv CH+	Ch +
1	1	Tv CH-	Ch -
2	2	Display	Info
3	3		
4	4		
5	5		
6	6		
7	7		
8	8		
9	9		
10/0	0		
>10	GUIDE		
Function	Smart		
Band	3D		
Enter	Pre Ch		

