 


Original	Replacement
Open/Close	Eject / Surround
Power	Power
Stereo/Mono	Shift + Audio / Lang I/II
Name	Text / Goto
Dimmer	Shift + Mute / Dimmer
Repeat	Green / APP / Repeat
Tv/Video	AV / Input / RDS
Clear	Exit / Cancel / Clear
Memory	Rec / Rec Mode
Time	Sleep / Timer
Muting	Mute / Dimmer
Play Mode	Shift + Play /
1	1
2	2
3	3
Function	Smart / List
Audio	Audio / Lang I/II


Original	Replacement
4	4
5	5
6	6
Band	TV/Radio /
Angle	Info / Angle
7	7
8	8
9	9
Sound Field	Sound / Title
Subtitle	Subtitle / EQ
>10	Guide / EPG / -/-
10/0	0
Enter	Fav / Marker / PC
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
I<</Preset-	I<< / Preset-

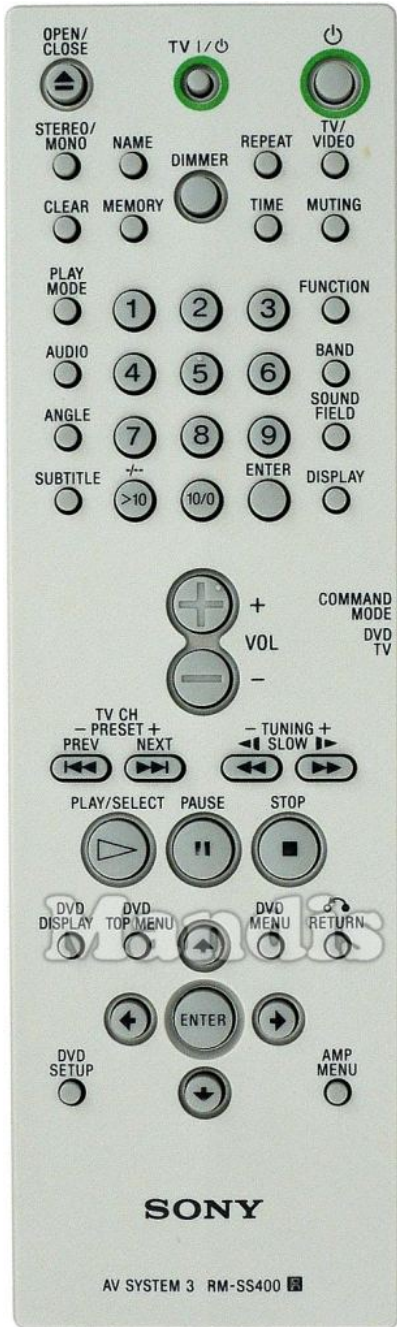



Original	Replacement	Original	Replacement
			
>>I/Presets+	>>I / Presets+		
			
<</Tuning-/<I	<< / Tune-		
			
Tuning+/Slow	>> / Tune+		
			
Play/Select	Play / Slow		
			
Pause	Pause / Step / Freeze		
			
Stop	Stop / Hold		
			
DVD Display	Shift + Display / Media		
			
DVD Top Menu	Shift + D.Menu / Top Menu		
			
Up	Up		
			
DVD Menu	D.Menu / Top		
			
Return	Back / Return		
			
Left	Left		
			
Enter	OK		
			
Right	Right		
			
DVD Setup	Setup / OPT /		
			
Down	Down		
			
AMP Menu	Menu / Home		



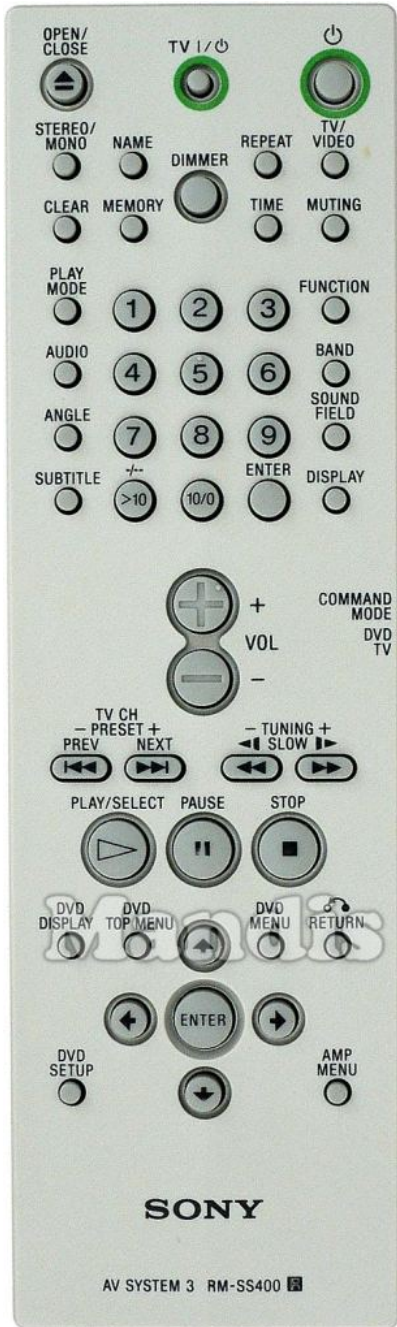 

Original	Replacement
Power Tv	Power
Stereo/Mono	Audio / Lang I/II
Tv/Video	AV / Input / RDS
Memory	Rec / Rec Mode
Muting	Mute / Dimmer
1	1
2	2
3	3
Function	Smart / List
4	4
5	5
6	6
Band	TV/Radio /
7	7
8	8
9	9
Sound Field	Sound / Title

Original	Replacement
>10	Guide / EPG / -/--
10/0	0
Display	Display / Media
Vol+	Vol+
Vol-	Vol-
Tv CH-	CH- / Page-
Tv CH+	CH+ / Page+
Enter	OK
AMP Menu	Menu / Home

