 


 
Original	Replacement	Original	Replacement
	Power		Power
	Sleep		Sleep
	Play Mode		Shift + Play
	Tv/Video		TV/R
	Repeat Mode		Text
	Menu		Smart
	Display		Info
	Muting		Mute
	Auto Format		List
	Night Mode		AV
	Clear		Exit
	Audio		Dual
	Angle		Red
	Subtitle		Subt
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	10/0		0
>10 / -/-- button icon"/>	>10 / -/--		Guide
	Enter		Pre Ch
	Sound Field+		Ch +
	Sound Field-		Ch -
	Function		Media
	Tuner Band		Format
	Vol+		Vol +
	Vol-		Vol -
	I<</Preset-		I<<
	>>I/Preset+		>>I

 
 
 
 

 


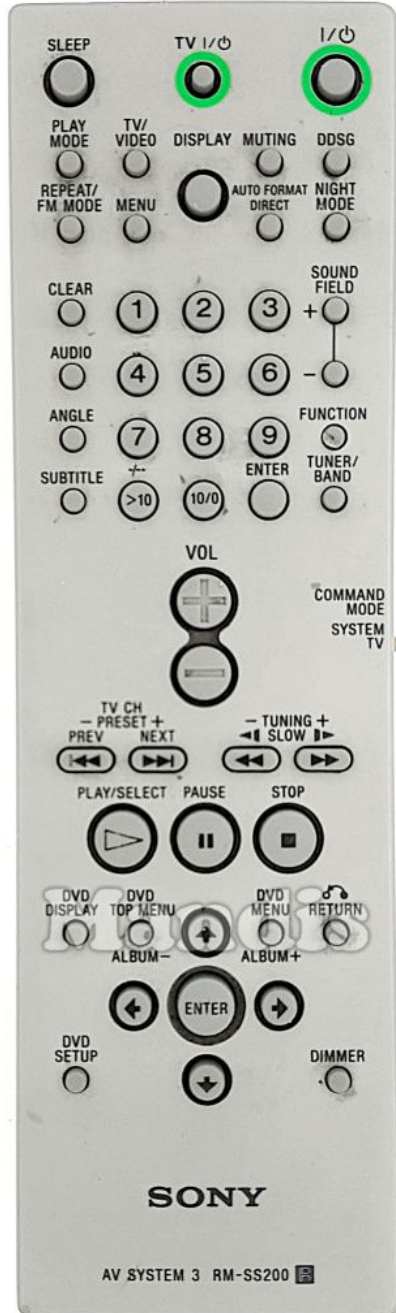



Original	Replacement	Original	Replacement
<</> Slow/Tune-	<<		
Tuning+ / Slow	>>		
Play	Play		
Pause	Pause		
Stop	Stop		
DVD Display	Shift + Info		
DVD Top	Menu		
DVD Menu /	D. Menu		
Return	Back		
Up	Up		
Left	Left		
Enter	Ok		
Right	Right		
Down	Down		
DVD Setup	Options		
Dimmer	Blue		

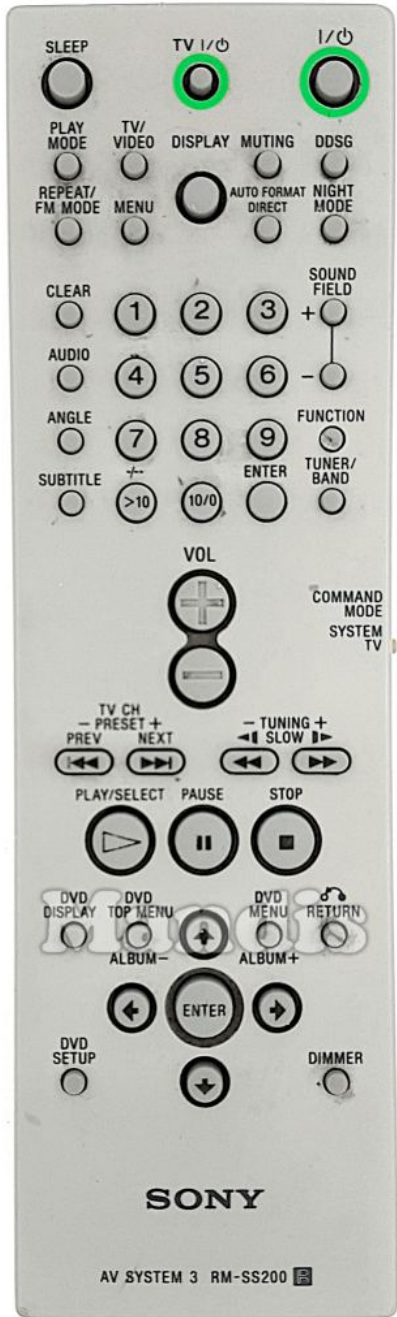



	Original	Replacement	Original	Replacement
	Power	 Power		
	1	 1		
	2	 2		
	3	 3		
	4	 4		
	5	 5		
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	0	 0		
	-/--	 GUIDE		
	TV Vol+	 Vol +		
	TV Vol-	 Vol -		
	TV CH+	 Ch +		
	TV CH-	 Ch -		
	Tv/Video	 TV/R		

