












 

 

 


 





















 


Original	Replacement	Original	Replacement
Theatre	 Fav / Marker / PC	Clear	 Exit / Cancel / Clear
One-Touch Play	 +  Shift + Play /	0	 0
Power	 Power	Time	 +  Shift + Sleep / Timer
Sleep	 Sleep / Timer	Audio	 Audio / Lang I/II
Night	 Text / Goto	Subtitles / D.Tuning	 Subtitle / EQ
Dynamic Bass	 Eject / Surround	Angle	 +  Shift + Info / Angle
TV	 +  Shift + 1	System Menu	 +  Shift + Menu /
TV	 TV/Radio /	Red	 Red / Netflix / Search
1	 1	Green	 Green / APP / Repeat
2	 2	Yellow	 Yellow / YouTube / Repeat
3	 3	Blue	 Blue / Prime Video / Random
4	 4	Top Menu	 D.Menu / Top
5	 5	Display	 Display / Media
6	 6	Pop Up / Menu	 Menu / Home
7	 7	Up	 Up
8	 8	Left	 Left
9	 9	Enter	 OK









































Original	Replacement	Original	Replacement
Right	 Right	Mute	 Mute / Dimmer
Return	 Back / Return	Vol+	 Vol+
Down	 Down	Vol-	 Vol-
Options	 Setup / OPT /	Display	 Info / Angle
Home	 Smart / List		
Function	 AV / Input / RDS		
Sound Mode	 Sound / Title		
I<< / Preset-	 I<< / Preset-		
<- Replay	 CH- / Page-		
-> Advance	 CH+ / Page+		
>>I / Preset+	 >>I / Preset+		
<< / Tuning-	 << / Tune-		
Play	 Play / Slow		
>> / Tuning+	 >> / Tune+		
Scene Search	 +  Shift + Red / Netflix /		
Pause	 Pause / Step / Freeze		
Stop	 Stop / Hold		





Original	Replacement	Original	Replacement
 Power	 Power	 Tools	 Setup / OPT /
 1	 1	 Muting	 Mute / Dimmer
 2	 2	 Volume+	 Vol+
 3	 3	 Prog+	 CH+ / Page+
 4	 4	 Source	 AV / Input / RDS
 5	 5	 Volume-	 Vol-
 6	 6	 Prog-	 CH- / Page-
 7	 7	 [i+]	 Info / Angle
 8	 8		
 9	 9		
 Text	 Text / Goto		
 0	 0		
 -/--	 Shift + Guide / EPG / -/--		
 Digital	 Smart / List		
 Analog	 Display / Media		
 Guide	 Guide / EPG / -/--		
 Home / Menu	 Menu / Home		

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 STEP-FREEZE	 SAT	 AUX
 HOLD	 REC MODE	 TUNE-	 TUNE+
 PRESET-	 PRESET+	 TITLE	 LANG UII
 EQ	 SURROUND	 SOUND	 AUDIO
 SUBTITLE	 PROGRAM	 PICTURE	 ZOOM
 SLEEP	 TV RADIO	 TOP MENU	 OPT-TOOLS
 RDS	 AV INPUT	 D.MENU	 SETUP
 HOME	 ANGLE	 MENU	 INFO
 OK	 RETURN	EXIT	BACK
CANCEL	LIST	VOL+	CH PAGE+
SMART	MEDIA	VOL-	CH PAGE-
DISPLAY	DISPLAY	TV	DVD
1	2	CD-STB	VIDEO
TAPE	TUNER	4	5
AUX-HDD	USB	BLUETOOTH	7
8	9	7	8
9	FC	GUIDE EPG	FAV MARKER
HDMI-BAT	FAV MARKER	NETFLIX	APP
FAV MARKER	FAV MARKER	YouTube	Prime Video
NETFLIX	APP	SEARCH	REPEAT
APP	YouTube	REPEAT A-B	RANDOM
YouTube	Prime Video		
Prime Video			

