



Original	Replacement
	Smart / List
	Display / Media
	Sleep / Timer
	Power
	Blue / Prime Video / Random
	Green / APP / Repeat
	Red / Netflix / Search
	Yellow / YouTube / Repeat
	Rec / Rec Mode
	Up
	Menu / Home
	Left
	OK
	Right
	Back / Return
	Down
	Setup / OPT /

Original	Replacement
	D.Menu / Top
	Sound / Title
	Audio / Lang I/II
	<< / Tune-
	Play / Slow
	>> / Tune+
	I<< / Preset-
	Pause / Step / Freeze
	Stop / Hold
	>>I / Preset+
	Mute / Dimmer
	Vol+
	CH+ / Page+
	TV/Radio /
	Vol-
	CH- / Page-



Tools