 




 

 
 

 



 



 



 
 

 
 




 
 

 


 
 




Original	Replacement
 Power	 Power
 Home	 Smart
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [:≡]/♥/List	 Shift + Pre Ch
 Recall	 Pre Ch
 Source	 AV
 Menu	 Menu

Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Back	 Back
 Exit	 Exit
 P+	 Ch +
 P-	 Ch -
 Info	 Info
 Subtitle	 Subt
 Audio	 Dual
 AD	 Shift + Subt
 TTX	 Text
 Rec	 Rec





Original		Replacement		Original	Replacement
	T-Shift		Options		
	EPG/Reveal		Guide		
	Play		Play		
	Pause/Index		Pause		
	Stop		Stop		
	Zoom		Eject		
	I<</Hold		I<<		
	>>I/Language		>>I		
	Red		Red		
	Green		Green		
	Yellow		Yellow		
	Blue		Blue		

