



 





 



 

 

 



 

 

 











Original	Replacement
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Home
	YouTube
	Vol+
	TV
	CH+







 

Original	Replacement
	Vol-
	Source
	CH-
	USB
	Option
	Info
	FAV
	Menu
	EPG
	Up
	Left
	OK
	Right
	Down
	Back
	Exit
	Netflix

Original	Replacement
	Mute / Dimmer
	AV / Input / RDS
	CH- / Page-
	Shift + 8
	Setup / OPT /
	Info / Angle
	Fav / Marker / PC
	Menu / Home
	Guide / EPG / -/--
	Up
	Left
	OK
	Right
	Down
	Back / Return
	Exit / Cancel / Clear
	Shift + Red / Netflix / Search





Original	Replacement
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Sleep	 Sleep / Timer
 Zoom-	 Shift + Zoom /
 Zoom+	 Zoom / Size
 List	 Smart / List
 Text	 Text / Goto
 Sub	 Subtitle / EQ
 Recall	 Shift + Back / Return
 Eco	 Display / Media
 <<	 << / Tune-
 >>	 >> / Tune+
 I<	 I<< / Preset-
 >I	 >>I / Preset+
 Rec	 Rec / Rec Mode

Original	Replacement
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Audio	 Audio / Lang I/II

