



Original	Replacement	Original	Replacement
Power	Power	Up	Up
EPG	Guide / EPG / -/--	Display	Display / Media
REP	TV/Radio /	Left	Left
Mute	Mute / Dimmer	OK	OK
Rec List	Shift + Rec / Rec Mode	Right	Right
CH List	Smart / List	Menu	Menu / Home
Subtitle	Subtitle / EQ	Down	Down
Eject	Eject / Surround	Exit	Exit / Cancel / Clear
Rec	Rec / Rec Mode	1	1
Stop	Stop / Hold	2	2
I<<	I<< / Preset-	3	3
>>I	>>I / Preset+	4	4
Pause	Pause / Step / Freeze	5	5
Play	Play / Slow	6	6
<<	<< / Tune-	7	7
>>	>> / Tune+	8	8
Source	AV / Input / RDS	9	9





Original	Replacement	Original	Replacement
	0		0
	Recall		Back / Return
	Fav		Fav / Marker / PC
	Vol +		Vol+
	Picture		Picture / Format
	Nicam / A2		Audio / Lang I/II
	CH +		CH+ / Page+
	Vol -		Vol-
	Sound		Sound / Title
	Sleep		Sleep / Timer
	CH -		CH- / Page-
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue / Screen		Blue / Prime Video / Random
	Setup / TV/Txt		Setup / OPT /
	D-Menu /		D.Menu / Top

Original	Replacement	Original	Replacement
	Title / Reveal		Shift + Sound / Title
	PRO		Shift + Display / Media
	LAN / Hold		Shift + Smart / List
	Size / A-B		Zoom / Size
	Goto / Subpage		Text / Goto
	Index / Slow		Info / Angle



Cancel Menu