

 
 

 





Original		Replacement		Original		Replacement	
	Standby		Power		Favorite		Pre Ch
	DTV/VCR		AV		Game		Media
	Mute		Mute		Recall		Back
	Menu		Menu		1		1
	Info		Info		2		2
	EPG		Guide		3		3
	Exit		Exit		4		4
	Pause		Pause		5		5
	Up		Up		6		6
	Down		Down		7		7
	Right		Right		8		8
	Left		Left		9		9
	OK		Ok		0		0
	CH+		Ch +		Red		Red
	CH-		Ch -		Green		Green
	Vol+		Vol +		Yellow		Yellow
	Vol-		Vol -		Blue		Blue





	Original	Replacement		Original	Replacement
	Text				
	Subtitle				
	Audio				
	Tv/Radio	