



Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV
 Mute	 Mute	 CH+	 Ch +
 1	 1	 CH-	 Ch -
 2	 2	 Up	 Up
 3	 3	 Down	 Down
 4	 4	 Right	 Right
 5	 5	 Left	 Left
 6	 6	 OK	 Ok
 7	 7	 Menu	 Menu
 8	 8	 Exit	 Exit
 9	 9	 FAV	 Pre Ch
 0	 0	 SUBT	 Subt
 i	 Info	 EPG	 Guide
 Recall	 Back	 List	 List
 Vol+	 Vol +	 [≡]/Text	 Text
 Vol-	 Vol -	 [≡+]/Hold	 Options
 Nicam	 Smart	 [▼]/PgDn	 Shift + Ch -





	Original	Replacement	Original	Replacement
	[▲]/Pg Up	 +  Shift + Ch +		
	[≡i]/Index	 +  Shift + Info		
	[≡◆]/Size	 Format		
	[≡?]/Reveal	 3D		
	[≡o]/Subpage	 Media		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Cyan	 Blue		
	Sleep	 Sleep		
	Tv/Radio	 TV/R		
	Audio	 Dual		
	P.Mode	 +  Shift + Format		

