





 

 



 





 

 



























 

 




















 
 

 









 



 



 





 
 


Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Info	 Info / Angle
 TV	 TV/Radio /
 *	 Menu / Home
 Exit	 Exit / Cancel / Clear
 ←	 Back / Return

Original	Replacement
 Home	 Shift + Menu /
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 OK
 Netflix	 Shift + Red / Netflix /
 YouTube	 Shift + Yellow / YouTube /
 prime video	 Shift + Blue / Prime
 Google Play	 Shift + Green / APP /
 Vol+	 Vol+
 Vol-	 Vol-
 Smart Colors	 Smart / List
 Source	 AV / Input / RDS
 P+	 CH+ / Page+
 P-	 CH- / Page-
 [=]	 Text / Goto





Original		Replacement	
	USB		Shift + 8
	O)/I/II		Audio / Lang I/II
	Subt		Subtitle / EQ
	Play/[=]		Play / Slow
	Pause/TS		Pause / Step / Freeze
	Stop/[=+]		Stop / Hold
	Rec/[=♦]		Rec / Rec Mode
	<</[=o]		<< / Tune-
	<</[=i]		<< / Preset-
	>> /[=?]		>> / Preset+
	>> /[=x]		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Replacement	

