 
 
 
 



 

 



 

 

 
 
 
 
 

 
 
 








 







 
 

 
 
 




 


 

 


 


 



 




Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	List		List
	Recall		Back
	Vol +		Vol +
	Vol -		Vol -
	Aspect		Format
	Lang / Nicam		Dual
	Input		AV
	CH +		Ch +
	CH -		Ch -
	Up		Up
	Right		Right
	Down		Down
	Left		Left
	Enter		Ok
	Menu		Menu
	Exit		Exit
	Display		Info
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep
	FAV		Pre Ch
	Fav -		Shift + Down





Original		Replacement		Original		Replacement	
	Fav +	 + 	Shift + Up		Yellow		Yellow
	EPG		Guide		Blue		Blue
	Text		Text				
	Hold	 + 	Shift + Stop				
	TV / Radio		TV/R				
	Subtitle		Subt				
	Index / <<		<<				
	Size / >>		>>				
	Reveal / I<<		I<<				
	Subpage / >>I		>>I				
	Rec		Rec				
	Play / Pause		Play				
	Play / Pause		Pause				
	Stop		Stop				
	Media		Media				
	Red		Red				
	Green		Green				

