







 

 

 

 

 



 

 

 



 

 

 







 







 



 



 



 











Original		Replacement		Original		Replacement	
	D.Menu		D.Menu / Top		7		7
	Power		Power		8		8
	Open / Close		Eject / Surround		9		9
	Info		Info / Angle		Source		AV / Input / RDS
	P.Mode		Picture / Format		0		0
	S.Mode		Sound / Title		Q.View		Shift + Menu /
	Sleep		Sleep / Timer		Mute		Mute / Dimmer
	Audio I/II		Audio / Lang I/II		Guide		Guide / EPG / -/-
	Subtitle		Subtitle / EQ		Vol +		Vol+
	CH. List		Smart / List		P+		CH+ / Page+
	Screen		TV/Radio /		Vol -		Vol-
	1		1		P -		CH- / Page-
	2		2		Menu		Menu / Home
	3		3		FAV		Fav / Marker / PC
	4		4		Up		Up
	5		5		Left		Left
	6		6		OK		OK



