



 



 







 



 







 







 




 

 
 



 







 


 





































Original		Replacement		Original		Replacement	
	TV/R		TV/Radio /		RECALL		Back / Return
	POWER		Power		0		0
	MUTE		Mute / Dimmer		FAV 2		Shift + Fav / Marker / PC
	SLEEP		Sleep / Timer		FAV 1		Fav / Marker / PC
	1		1		MENU		Menu / Home
	2		2		EXIT		Exit / Cancel / Clear
	3		3		Up / CH +		Up
	SUB		Subtitle / EQ		Left / VOL -		Left
	4		4		OK		OK
	5		5		Right / VOL +		Right
	6		6		Down / CH -		Down
	EPG 2		Shift + Guide / EPG / -/-		Red / Audio		Red / Netflix / Search
	EPG 1		Guide / EPG / -/-		Red / Audio		Audio / Lang I/II
	7		7		Blue / Info		Info / Angle
	8		8		Blue / Info		Blue / Prime Video / Random
	9		9		GREEN/PAUSE		Green / APP / Repeat
	TXT		Text / Goto		Yellow / Zoom		Zoom / Size





Original		Replacement		Original		Replacement	
	Yellow / Zoom		Yellow / YouTube / Repeat				
	VOL+		Vol+				
	Page+		CH+ / Page+				
	VOL-		Vol-				
	Page-		CH- / Page-				
	<<		<< / Tune-				
	>>		>> / Tune+				
	PLAY		Play / Slow				
	STOP		Stop / Hold				
	I<<		I<< / Preset-				
	>>I		>>I / Preset+				
	PAUSE		Pause / Step / Freeze				
	REC		Rec / Rec Mode				

