 



 

 

 







 

 



 

 

















Original	Replacement	Original	Replacement
	Power		Mute
	3D		Mute / Dimmer
	TV		CH+ / Page+
	TV		Vol-
	1		CH- / Page-
	2		Info
	3		Option
	4		Smart Tv
	5		Guide
	6		Menu
	7		Up
	8		Left
	9		OK
	Eco		Right
	Source		Back
	Vol+		Down
	Vol+		Exit
	Vol+		Zoom-
	Vol+		Shift + Down





Original	Replacement
Zoom+	Shift + Up
@/Home	D.Menu / Top
Sleep	Sleep / Timer
Pre-CH	Shift + Back / Return
FAV	Fav / Marker / PC
List	Shift + Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
OO/Lang	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
I<	I<< / Preset-
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
>	>>  / Preset+
<<	<< / Tune-
Rec	Rec / Rec Mode
>>	>> / Tune+

