


 











 

 





 











 






 
 
 
 
 
 


 
 

 
 
 



 





















Original	Replacement	Original	Replacement
 Power	 Power	 6	 6
 Sleep	 Sleep	 7	 7
 RDS Display Mode	 Info	 8	 8
 RDS PTY Select	 Format	 9	 9
 RDS PTY Search	 TV/R	 0	 0
 VCR	 Shift + 1	 >10	 Guide
 CD	 Shift + 2	 Play CD	 Play
 Tuner/Band	 Shift + 3	 Pause CD	 Pause
 Auto/Mono	 Back	 Stop CD	 Stop
 VDP	 Shift + 4	 I<< CD	 I<<
 EXT	 Shift + 5	 >>I CD	 >>I
 Phono	 Shift + 6	 Open/Close CD	 Eject
 1	 1	 Repeat CD	 Text
 2	 2	 Program CD	 Smart
 3	 3	 Cancel CD	 Exit
 4	 4	 < Tape	 Red
 5	 5	 Stop Tape	 Green





Original		Replacement		Original		Replacement	
	Tape >		Yellow		Vol +		Vol +
	<< Tape		<<		Vol -		Vol -
	>> Tape		>>		Muting		Mute
	Open/Close		Shift + Eject				
	Deck 1/2 Tape		Blue				
	Rec/Pause Tape		Rec				
	Flat		Options				
	EQ Space		Subt				
	Balance R		Right				
	Balance L		Left				
	Delay Time		AV				
	Pro Logic		Dual				
	Test		Media				
	Surround +		Up				
	Surround -		Down				
	Center +		Ch +				
	Center -		Ch -				

