



 










 
 






































 
 
 



























Original	Replacement	Original	Replacement
 Power	 Power	 6	 6
 Sleep	 Sleep / Timer	 +10	 Guide / EPG / -/-
 Display Mode RDS	 Display / Media	 Phono	 Shift + 7
 Select PTY	 Yellow / YouTube / Repeat	 7	 7
 Search PTY	 Red / Netflix / Search	 8	 8
 VCR	 Shift + 4	 9	 9
 CD	 Shift + 3	 0	 0
 Tuner / Band	 Shift + 6	 Play CD	 Play / Slow
 Auto / Mono	 Audio / Lang I/II	 Pause CD	 Pause / Step / Freeze
 VDP	 Shift + 2	 Stop CD	 Stop / Hold
 1	 1	 I<< CD	 I<< / Preset-
 2	 2	 >>I CD	 >>I / Preset+
 3	 3	 Open/Close CD	 Eject / Surround
 Disc	 Fav / Marker / PC	 Repeat CD	 Green / APP / Repeat
 EXT	 Shift + 1	 Program CD	 TV/Radio /
 4	 4	 Cancel CD	 Exit / Cancel / Clear
 5	 5	 < Tape	 Left





Original	Replacement
 Stop Tape	 OK
 Tape >	 Right
 << Tape	 Down
 >> Tape	 Up
 Open/Close	 Back / Return
 Deck 1/2 Tape	 Smart / List
 Rec Pause Tape	 Info / Angle
 Prologic	 Sound / Title
 Delay Time	 Zoom / Size
 Balance L	 Shift + Left
 Balance R	 Shift + Right
 Test	 Text / Goto
 Center -	 Shift + Down
 Center +	 Shift + Up
 Surround -	 CH- / Page-
 Surround +	 CH+ / Page+
 Muting -20dB	 Mute / Dimmer

Original	Replacement
 Volume -	 Vol-
 Volume +	 Vol+

