










 





 



 

 

 









 



 

 




 



 

 



 

 


 
 





Original	Replacement	Original	Replacement
	Power MD		Power
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	Tape		Red
	VCR		Smart
	MD		Media
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Stop MD		Stop
	Play MD		Play
	<</<< MD		<<
	>>/>> MD		>>
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	1 MD		1
	2 MD		2
	3 MD		3
	4 MD		4
	5 MD		5
	6 MD		6
	7 MD		7
	8 MD		8
	9 MD		9
	0 MD		0
	>10/-/- MD		Guide




 


 




Original	Replacement
 Tv/AV	 AV
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 Power TV	 Shift + Power
 Tv Vol Up	 Shift + Vol +
 Tv Vol Down	 Shift + Vol -
 1 Tv	 Shift + 1
 2 Tv	 Shift + 2
 3 Tv	 Shift + 3
 4 Tv	 Shift + 4
 5 Tv	 Shift + 5

Original	Replacement
 6 Tv	 Shift + 6
 7 Tv	 Shift + 7
 8 Tv	 Shift + 8
 9 Tv	 Shift + 9
 0 Tv	 Shift + 0
 >10/-/- Tv	 Shift + Guide




 

 





Original	Replacement	Original	Replacement
 Power DVD	 Power	 Right	 Right
 TV	 TV/R	 Left	 Left
 VCR	 Smart	 Enter	 Ok
 Tuner/Band	 Green	 Stereo	 Dual
 Tape	 Red	 Surround	 Options
 MD	 Media	 SFC	 Subt
 CD	 Yellow	 Test	 Back
 DVD	 Blue	 Delay	 Format
 Play DVD	 Play	 Level	 3D
 I<</<< DVD	 <<	 +	 Ch +
 Stop DVD	 Stop	 -	 Ch -
 >>/>>I DVD	 >>	 1 DVD	 1
 Top Menu/Disc/Deck	 Menu	 2 DVD	 2
 Display	 Info	 3 DVD	 3
 Menu	 D. Menu	 4 DVD	 4
 Up	 Up	 5 DVD	 5
 Down	 Down	 6 DVD	 6

 

 











 




 



 

 

 

 






 


 



 








 











 
 






Original	Replacement	Original	Replacement
	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play





Original	Replacement	Original	Replacement
	Power VCR		Power
	VCR		Smart
	Tape		Red
	TV		TV/R
	CD		Yellow
	DVD		Blue
	Tuner/Band		Green
	MD		Media
	Stop		Stop
	I<</<<		<<
	>>/>>I		>>
	Play		Play
	1 VCR		1
	2 VCR		2
	3 VCR		3
	4 VCR		4
	5 VCR		5
	6 VCR		6
	7 VCR		7
	8 VCR		8
	9 VCR		9
	0 VCR		0
	>10/-/- VCR		Guide
	Direct Tuning/Disc Enter		Text
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Enter		Ok
	Top Menu/Disc/Deck		Menu
	Display		Info



