


Original	Replacement	Original	Replacement
 Stereo	 Dual	 Select	 Ok
 Level	 Media	 Menu	 D. Menu
 Delay	 Options	 Display	 Info
 Surround	 Subt	 Disc/Deck 1/2	 Menu
 TV	 TV/R	 Tv/AV	 AV
 CD	 Yellow	 +	 Ch +
 DVD	 Blue	 -	 Ch -
 Tuner/Band	 Green	 Test	 Text
 Tape	 Red	 Power TV	 Power
 VCR	 Smart	 Tv Vol Up	 Shift + Vol +
 Vol+	 Vol +	 Tv Vol Down	 Shift + Vol -
 Vol-	 Vol -	 1 Tv	 1
 Muting	 Mute	 2 Tv	 2
 Up	 Up	 3 Tv	 3
 Down	 Down	 4 Tv	 4
 Right	 Right	 5 Tv	 5
 Left	 Left	 6 Tv	 6




 
 




 


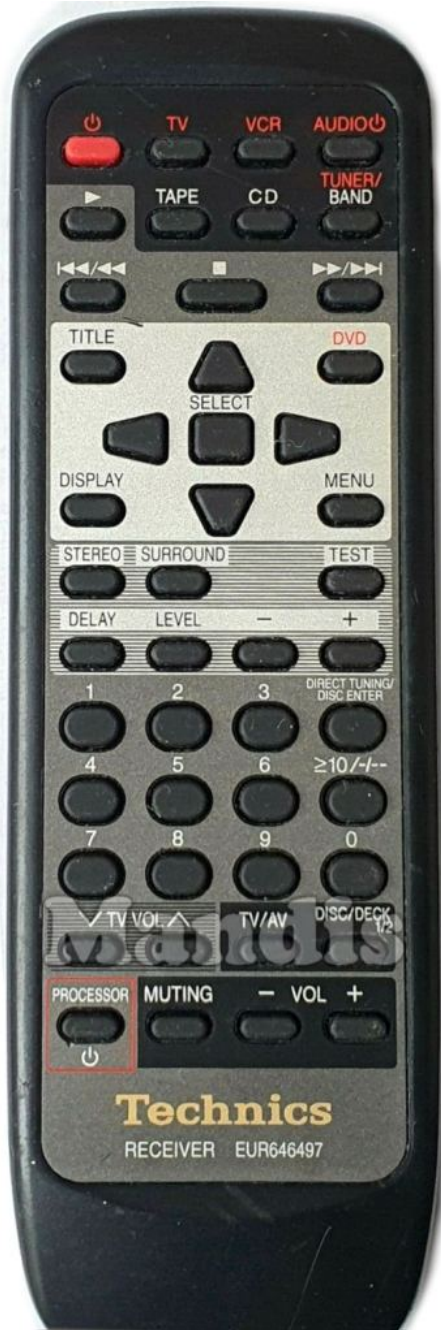

 









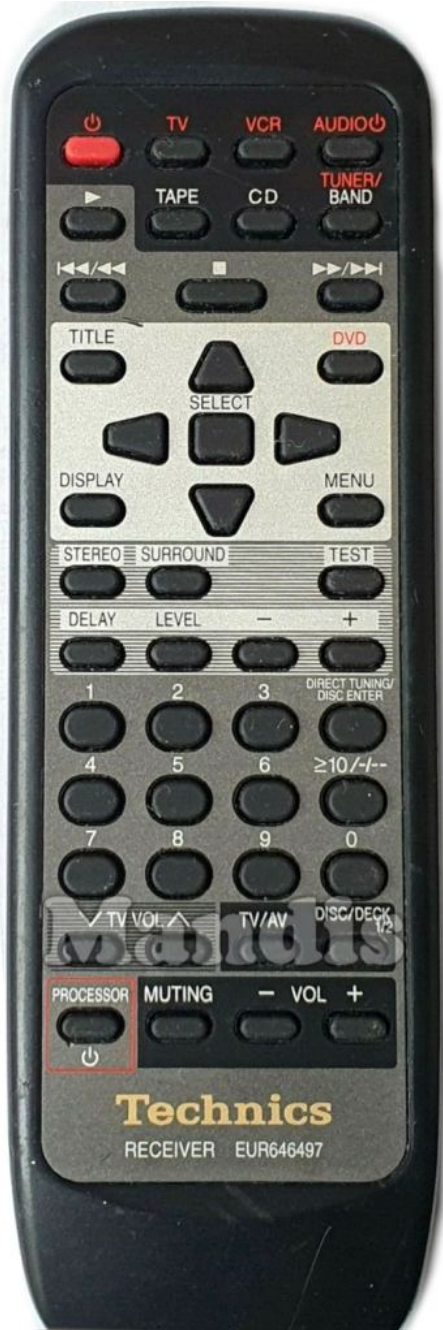
	Original	Replacement	Original	Replacement
7	7 Tv	7		
8	8 Tv	8		
9	9 Tv	9		
0	0 Tv	0		
>10/--	>10/-- Tv	GUIDE		


 



 










Original	Replacement	Original	Replacement
 Power DVD	 Power	 Menu	 D. Menu
 Level	 Media	 Up	 Up
 Delay	 Options	 Down	 Down
 Surround	 Subt	 Right	 Right
 Stereo	 Dual	 Left	 Left
 TV	 TV/R	 Select	 Ok
 VCR	 Smart	 Test	 Text
 Tuner/Band	 Green	 +	 Ch +
 Tape	 Red	 -	 Ch -
 CD	 Yellow	 1 DVD	 1
 DVD	 Blue	 2 DVD	 2
 Play DVD	 Play	 3 DVD	 3
 I<</<< DVD	 <<	 4 DVD	 4
 Stop DVD	 Stop	 5 DVD	 5
 >>/>>I DVD	 >>	 6 DVD	 6
 Disc/Deck 1/2	 Menu	 7 DVD	 7
 Display	 Info	 8 DVD	 8





	Original		Replacement	
	9 DVD		9	
	0 DVD		0	
	>10/--- DVD		Guide	
	Vol+		Vol +	
	Vol-		Vol -	
	Muting		Mute	

	Original		Replacement	






Original	Replacement	Original	Replacement
	Power CD		Power
	Level		Media
	Surround		Subt
	Delay		Options
	Stereo		Dual
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	Tuner/Band		Green
	Stop CD		Stop
	I<<</>>I CD		<<
	>>>/<<<I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Disc/Deck 1/2		Menu
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	Select		Ok
	Test		Text
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play
	I<<</>>I Tape		Shift + <<
	>>>/<<<I Tape		Shift + >>


 







 


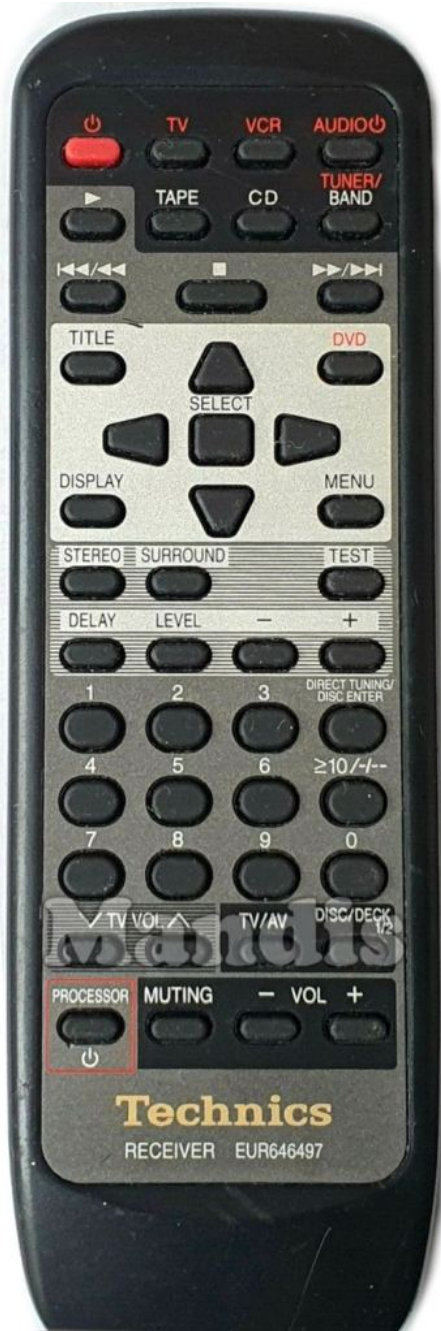
 



 



 



 









 




 




 





 



 















Original		Replacement		Original	Replacement
	Disc/Deck 1/2	+	Shift + Menu		
	1 CD-Tape		1		
	2 CD-Tape		2		
	3 CD-Tape		3		
	4 CD-Tape		4		
	5 CD-Tape		5		
	6 CD-Tape		6		
	7 CD-Tape		7		
	8 CD-Tape		8		
	9 CD-Tape		9		
	0 CD-Tape		0		
	>10/-/- CD-Tape		Guide		
	Direct Tuning/Disc Enter		List		







 

 


 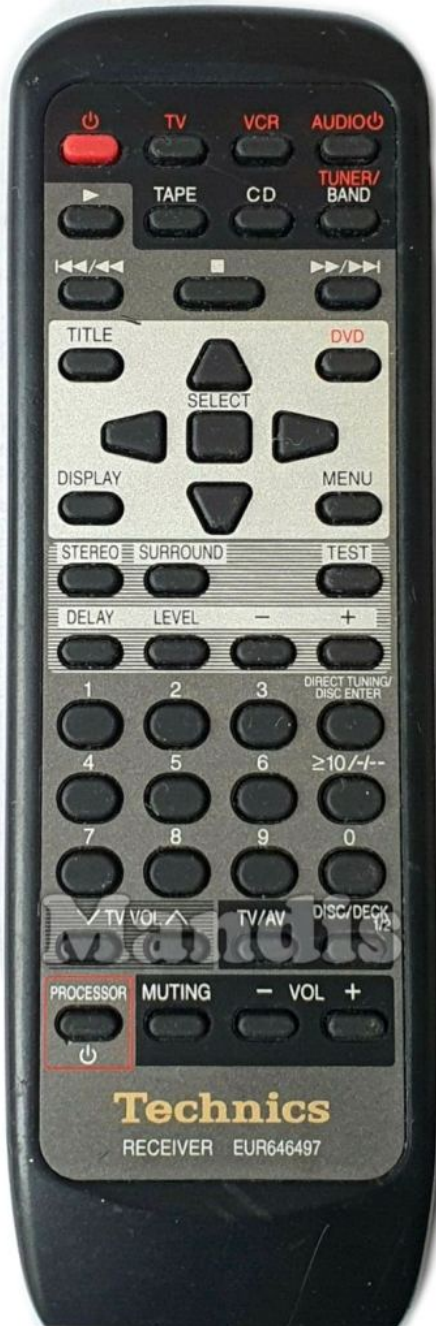


















Original		Replacement		Original		Replacement	
	Power VCR		Power		3 VCR		3
	Level		Media		4 VCR		4
	Delay		Options		5 VCR		5
	Surround		Subt		6 VCR		6
	Stereo		Dual		7 VCR		7
	VCR		Smart		8 VCR		8
	Tape		Red		9 VCR		9
	TV		TV/R		0 VCR		0
	CD		Yellow		>10/-/- VCR		Guide
	DVD		Blue		Direct Tuning/Disc Enter		List
	Tuner/Band		Green		Vol+		Vol +
	Stop		Stop		Vol-		Vol -
	I<</<<		<<		Muting		Mute
	>>/>>I		>>		Up		Up
	Play		Play		Down		Down
	1 VCR		1		Right		Right
	2 VCR		2		Left		Left





Original	Replacement
 Select	 Ok
 Disc/Deck 1/2	 Menu
 Display	 Info
 Menu	 D. Menu
 Test	 Text
 +	 Ch +
 -	 Ch -
 Power Tuner/Band	 Shift + Power
 1 Tuner/Band	 Shift + 1
 2 Tuner/Band	 Shift + 2
 3 Tuner/Band	 Shift + 3
 4 Tuner/Band	 Shift + 4
 5 Tuner/Band	 Shift + 5
 6 Tuner/Band	 Shift + 6
 7 Tuner/Band	 Shift + 7
 8 Tuner/Band	 Shift + 8
 9 Tuner/Band	 Shift + 9

Original	Replacement
 0 Tuner/Band	 Shift + 0
 >10/-/-	 Shift + Guide

