 




 

 



 







 



 


 
 


 
 


 
 





















Original	Replacement	Original	Replacement
 Power	 Power	 5	 5
 Sleep	 Sleep	 6	 6
 Pro Logic	 Media	 7	 7
 Test	 Text	 8	 8
 CH/Level +	 Ch +	 9	 9
 CH/Level -	 Ch -	 0	 0
 Audio Power	 Shift + Power	 ≥10 / -/-	 Guide
 TV	 Up	 Muting	 Mute
 VCR	 Left	 Volume-	 Vol -
 TUNER	 Ok	 Volume+	 Vol +
 CD	 Right		
 TAPE	 Down		
 Direct Tuning / Disc Enter	 Smart		
 1	 1		
 2	 2		
 3	 3		
 4	 4		

