





 





 



 





 



 





 

 



 

 



 
 


 
 
 



 





 



 







Original	Replacement
	 Mute / Dimmer
	 Power
	 Display / Media
	 Guide / EPG / -/--
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS

Original	Replacement
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Smart / List
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-









 

 

 

 

 

 

 

 



 

 









 



 

 



 
 


 
 
 



 





 



 

 

Original	Replacement	Original	Replacement
	Stop		Stop / Hold
	Play / Pause		Play / Slow
	Play / Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Prog -		CH- / Page-
	Prog +		CH+ / Page+
	Volume -		Vol-
	Volume +		Vol+
	TXT		Text / Goto
	Still	+	Shift + Pause / Step /
	Sound		Sound / Title
	PIP		D.Menu / Top
	Menu		Menu / Home
	HDMI	+	Shift + 0

Original	Replacement





Original	Replacement
	 Mute / Dimmer
	 Power
	 Fav / Marker / PC
	 Smart / List
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS

Original	Replacement
	 Setup / OPT /
	 Display / Media
	 TV/Radio /
	 D.Menu / Top
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-







 





 



 





 



 





 



 



 

 



 



 

 



 





 



 





Original	Replacement	Original	Replacement
	Stop / Hold		
	Play / Slow		
	>> / Tune+		
	CH- / Page-		
	CH+ / Page+		
	Vol-		
	Vol+		
	Text / Goto		
	Pause / Step / Freeze		
	Sound / Title		
	Picture / Format		
	Menu / Home		
	+ Shift + 0		





Original	Replacement
	 Mute / Dimmer
	 Power
	 Display / Media
	 Guide / EPG / -/--
	 Sleep / Timer
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Zoom / Size
	 0
	 AV / Input / RDS

Original	Replacement
	 Setup / OPT /
	 Picture / Format
	 TV/Radio /
	 Smart / List
	 Rec / Rec Mode
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Red / Netflix / Search
	 Up
	 Blue / Prime Video / Random
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Info / Angle
	 Down
	 << / Tune-





Original	Replacement	Original	Replacement
Stop	Stop / Hold		
Play / Pause	Play / Slow		
Play / Pause	Pause / Step / Freeze		
>>	>> / Tune+		
Prog -	CH- / Page-		
Prog +	CH+ / Page+		
Volume -	Vol-		
Volume +	Vol+		
TXT	Text / Goto		
Still	+ Shift + Pause / Step /		
Sound	Sound / Title		
PIP	D.Menu / Top		
Menu	Menu / Home		
HDMI	+ Shift + 0		

Original	Replacement	Original	Replacement

