









Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 0
 0 / AV	 AV / Input / RDS
 OPT	 Setup / OPT /
 Red / <<	 << / Tune-
 Red / <<	 Red / Netflix / Search

Original	Replacement
 Green / Stop	 Stop / Hold
 Green / Stop	 Green / APP / Repeat
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / Aspect /	 Picture / Format
 Blue / Aspect /	 Blue / Prime Video / Random
 Blue / Aspect /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original	Replacement
 TV / Radio	 TV/Radio /
 Vol -	 Vol-
 Prog -	 CH- / Page-
 Menu	 Menu / Home
 Vol +	 Vol+
 TXT / Mix	 Text / Goto
 Still	 Pause / Step / Freeze
 PIP	 D.Menu / Top
 Sound	 Sound / Title
 SAT1	 Shift + 2
 SAT2	 Shift + 3
 TV	 Shift + 1
 Sleep	 Sleep / Timer

Original	Replacement





 




 







Original	Replacement
Mute	Mute / Dimmer
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
REC	Rec / Rec Mode
0 / AV	AV / Input / RDS
0 / AV	0
OPT	Setup / OPT /
Red / <<	<< / Tune-
Red / <<	Red / Netflix / Search

Original	Replacement
Green / Stop	Green / APP / Repeat
Green / Stop	Stop / Hold
Yellow /	Play / Slow
Yellow /	Yellow / YouTube / Repeat
Blue / >> /	>> / Tune+
Blue / >> /	Picture / Format
Blue / >> /	Blue / Prime Video / Random
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
SFI / EPG	Guide / EPG / -/-
Exit / Recall	Exit / Cancel / Clear
Exit / Recall	Back / Return
Info	Info / Angle
Prog +	CH+ / Page+






Original	Replacement	Original	Replacement
 TV / Radio	 TV/Radio /		
 Vol -	 Vol-		
 Prog -	 CH- / Page-		
 Menu	 Menu / Home		
 Vol +	 Vol+		
 TXT / Mix	 Text / Goto		
 Still	 Pause / Step / Freeze		
 PIP	 D.Menu / Top		
 Sound	 Sound / Title		
 SAT1	 Shift + 2		
 SAT2	 Shift + 3		
 TV	 Shift + 1		
 Sleep	 Sleep / Timer		

Original	Replacement





Original	Replacement
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 REC	 Rec / Rec Mode
 0 / AV	 AV / Input / RDS
 0 / AV	 0
 OPT	 Setup / OPT /
 Red / <<	 Red / Netflix / Search
 Red / <<	 << / Tune-

Original	Replacement
 Green / Stop	 Green / APP / Repeat
 Green / Stop	 Stop / Hold
 Yellow /	 Play / Slow
 Yellow /	 Yellow / YouTube / Repeat
 Blue / >> /	 Blue / Prime Video / Random
 Blue / >> /	 Picture / Format
 Blue / >> /	 >> / Tune+
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 SFI / EPG	 Guide / EPG / -/-
 Exit / Recall	 Exit / Cancel / Clear
 Exit / Recall	 Back / Return
 Info	 Info / Angle
 Prog +	 CH+ / Page+





Original		Replacement	
	TV / Radio		TV/Radio /
	Vol -		Vol-
	Prog -		CH- / Page-
	Menu		Menu / Home
	Vol +		Vol+
	TXT / Mix		Text / Goto
	Still		Pause / Step / Freeze
	PIP		D.Menu / Top
	Sound		Sound / Title
	SAT1		Shift + 2
	SAT2		Shift + 3
	TV		Shift + 1
	Sleep		Sleep / Timer

Original		Replacement	

