
 




 
 


 




Original	Replacement	Original	Replacement
 Power	 Power	 0	 0
 Up	 Up	 -/--	 Guide
 Down	 Down	 PP	 Back
 Right	 Right	 P/CH+	 Ch +
 Left	 Left	 P/CH-	 Ch -
 OK	 Ok	 P<P	 Pre Ch
 M	 Menu	 Vol+	 Vol +
 [i]	 Info	 Vol-	 Vol -
 1	 1	 Mute	 Mute
 2	 2	 I-II	 Dual
 3	 3	 TV	 TV/R
 4	 4	 AV	 AV
 5	 5	 Red/Sound	 Red
 6	 6	 Green/Picture	 Green
 7	 7	 Yellow/Feature	 Yellow
 8	 8	 Blue/Install	 Blue
 9	 9	 [≡]	 Text





Original	Replacement	Original	Replacement
[≡o]	HOME SMART Smart		
[≡+]	PICTURE FORMAT Format		
[≡x]/[··]	ECO 3D 3D		
[/≡]/[*]	AD SUBT Subt		
[≡♦]/[+]	SETTINGS OPT Options		
[≡?]/PC	APP MEDIA Media		
[≡i]	DISC NAV LIST List		

