



















 


 


 


























| Original | Replacement | |
|---------------|---|--------------------------|
| Audio+ |  +  | Shift + Vol+ |
| Reveal |  | Setup / OPT / |
| Update |  | Smart / List |
| Bright- Sys |  +  | Shift + CH- / |
| Bright+ Mode |  +  | Shift + CH+ / |
| AV 2 |  +  | Shift + AV / Input / RDS |
| 4 |  | 4 |
| 5 |  | 5 |
| 6 |  | 6 |
| 7 |  | 7 |
| 8 |  | 8 |
| 9 |  | 9 |
| Guide -/-- 1. |  | Guide / EPG / -/-- |
| 0/10 |  | 0 |
| 2.Fav P/C 2. |  | Fav / Marker / PC |
| Red |  | Red / Netflix / Search |
| Green |  | Green / APP / Repeat |

| Original | Replacement | |
|----------------|---|-----------------------------|
| Yellow |  | Yellow / YouTube / Repeat |
| Blue |  | Blue / Prime Video / Random |
| Audio- |  +  | Shift + Vol- |
| 3 |  | 3 |
| Tone- |  | << / Tune- |
| Tone+ |  | >> / Tune+ |
| Color+ P.Std |  | Picture / Format |
| Contrast+ |  | >> / Preset+ |
| Color- S.Std |  | Sound / Title |
| Contrast- |  | I<< / Preset- |
| Surround |  | Eject / Surround |
| Nicam/Mono |  +  | Shift + Audio / Lang I/II |
| Level L |  +  | Shift + Left |
| Level R/Woofer |  +  | Shift + Right |
| Display |  | Display / Media |
| Mute |  | Mute / Dimmer |
| Txt Stop |  | Stop / Hold |



| Original | Replacement | Original | Replacement |
|-------------|---|------------|---|
| Info |  Info / Angle | Volume+ |  Vol+ |
| Subt.List |  Subtitle / EQ | Chan.Up |  CH+ / Page+ |
| Sleep Timer |  Sleep / Timer | Volume- |  Vol- |
| Return TV |  TV/Radio / | Menu audio |  Audio / Lang I/II |
| Menu video |  D.Menu / Top | Chan.Down |  CH- / Page- |
| Text |  Text / Goto | 1 |  1 |
| Txt Expand |  Zoom / Size | 2 |  2 |
| TV/AV |  AV / Input / RDS | | |
| Menu |  Menu / Home | | |
| Menu Up |  Up | | |
| On/Off |  Power | | |
| Menu Left |  Left | | |
| OK Enter |  OK | | |
| Menu Right |  Right | | |
| Menu Off |  Exit / Cancel / Clear | | |
| Menu Down |  Down | | |
| Back |  Back / Return | | |

