



Original	Replacement
 POWER	 Power
 TV	 TV/R
 VCR / AUX	 Shift + TV/R
 SLEEP	 Sleep
 TV / AV	 AV
 TUNER / BAND	 Smart
 DVD / CD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 ≧10 / -/-	 Guide
 Cancel	 Exit
 CH +	 Ch +
 CH -	 Ch -
 VOL +	 Vol +
 VOL -	 Vol -
 SKIP PREV.	 I<<
 SKIP NEXT	 >>I
 SLOW/SEARCH	 <<
 SLOW/SEARCH	 >>
 STOP	 Stop
 PAUSE	 Pause
 PLAY	 Play
 TOP MENU / DIR. NAV.	 D. Menu
 MENU / PLAY LIST	 Menu
 UP	 Up
 LEFT	 Left






 





 

 







 



 

 


 









Original	Replacement
 ENTER	 Ok
 RIGHT	 Right
 DOWN	 Down
 DISPLAY / TV VOL-	 Info
 DISPLAY / TV VOL-	 Shift + Vol -
 RETURN / TV	 Shift + Vol +
 RETURN / TV	 Back
 SUBWOOFER	 3D
 SFC	 Green
 C. FOCUS	 Shift + 1
 SUPER SRND.	 Format
 DOLBY PL. II	 Dual
 Mix 2CH	 Shift + Subt
 C. S. M.	 Red
 POSITION	 Pre Ch
 AUDIO	 Shift + Dual
 ZOOM	 Eject

Original	Replacement
 SETUP	 Options
 MUTING	 Mute
 FL DISPLAY	 Shift + Info
 PAGE	 Shift + 2
 GROUP	 Shift + 3
 REPEAT	 Text
 PLAY MODE	 Shift + Play
 TEST	 Yellow
 CH. SELECT	 List
 QUICK REPLAY	 Blue
 SUBTITLE	 Subt








 

 



 

 



 








 















Original	Replacement
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 GUIDE
 Tv/AV	 AV
 CH+	 Ch +
 CH-	 Ch -
 Tv Vol+	 Vol +

Original	Replacement
 Tv Vol-	 Vol -





Original	Replacement
 Power	 Power
 Power AV	 Shift + Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 ≥10 / -/-	 GUIDE Guide
 SKIP >>	 >>
 SKIP <<	 <<
 SLOW SE <<	 <<
 SEARCH >>	 >>

Original	Replacement
 Pause	 Pause
 Play	 Play
 Stop	 Stop

