 

 



 



 

 







 

 

 





 



 

 

 

 










 


 

 



 
 

 




Original	Replacement
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 [TV]	 TV/Radio /
 Internet	 Smart / List
 Fav / Marker / PC	 Fav / Marker / PC
 Mute	 Mute / Dimmer
 Vol+	 Vol+

Original	Replacement
 Vol-	 Vol-
 P+	 CH+ / Page+
 P-	 CH- / Page-
 OK	 OK
 Menu	 Menu / Home
 Back	 Back / Return
 Exit	 Exit / Cancel / Clear
 Q.Menu	 D.Menu / Top
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 i	 Info / Angle
 EPG	 Guide / EPG / -/-
 TXT	 Text / Goto
 Lang.	 Audio / Lang I/II
 Subt.	 Subtitle / EQ





Original	Replacement	Original	Replacement
	Red		Red / Netflix / Search
	[>]		Picture / Format
	[+]		Zoom / Size
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	*1/O		Shift + 1
	*2/Q		Shift + 2
	Blue		Blue / Prime Video / Random
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	<<		<< / Tune-
	Stop		Stop / Hold

