



Original	Replacement
Power	Power
Source (Games)	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TV	TV/Radio /
0	0
Recall	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
PR+	CH+ / Page+

Original	Replacement
Vol-	Vol-
World/Internet	Smart / List
PR-	CH- / Page-
Menu	Menu / Home
Q.Menu	D.Menu / Top
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Back	Back / Return
Exit	Exit / Cancel / Clear
i	Info / Angle
Movie-Music-Phot	Display / Media
Guide	Guide / EPG / -/-
*/o	Picture / Format
*/o..	Setup / OPT /





Original	Replacement	Original	Replacement
 [=]/Text	 GOTO TEXT Text / Goto		
 Red	 NETFLIX SEARCH Red / Netflix / Search		
 Green	 APP REPEAT Green / APP / Repeat		
 Yellow	 YouTube REPEAT A-B Yellow / YouTube / Repeat		
 Blue	 Prime Video RANDOM Blue / Prime Video / Random		
 LANG. Lang	 LANG I/II AUDIO Audio / Lang I/II		
 [=]..	 EQ SUBTITLE Subtitle / EQ		
 [-o-]	 SIZE ZOOM Zoom / Size		
 <<	 TUNE- << / Tune-		
	 STEP-FREEZE    Pause / Step / Freeze		
 >>	 TUNE+ >> / Tune+		
 Rec	 REC MODE Rec / Rec Mode		
 ▶	 SLOW ▶ Play / Slow		
 ■	 HOLD ■ Stop / Hold		

