





 







 























| Original  | Replacement | Original  | Replacement       |
|---|-------------|---|-------------------|
|    | Power       |    | Power             |
|    | Input       |    | AV / Input / RDS  |
|    | 1           |    | 1                 |
|    | 2           |    | 2                 |
|    | 3           |    | 3                 |
|    | 4           |    | 4                 |
|    | 5           |    | 5                 |
|    | 6           |    | 6                 |
|    | 7           |    | 7                 |
|    | 8           |    | 8                 |
|   | 9           |   | 9                 |
|  | Lang        |  | Audio / Lang I/II |
|  | 0           |  | 0                 |
|  | TXT         |  | Text / Goto       |
|  | Vol+        |  | Vol+              |
|  | Mute        |  | Mute / Dimmer     |
|  | P+          |  | CH+ / Page+       |

| Original  | Replacement | Original  | Replacement           |
|---|-------------|---|-----------------------|
|    | Vol-        |    | Vol-                  |
|    | Home        |    | Menu / Home           |
|    | P-          |    | CH- / Page-           |
|    | Guide       |    | Guide / EPG / -/--    |
|    | Up          |    | Up                    |
|    | i           |    | Info / Angle          |
|    | Left        |    | Left                  |
|    | OK          |    | OK                    |
|    | Right       |    | Right                 |
|   | Back        |    | Back / Return         |
|  | Down        |  | Down                  |
|  | Exit        |  | Exit / Cancel / Clear |
|  | <<          |  | << / Tune-            |
|  | Pause       |  | Pause / Step / Freeze |
|  | >>          |  | >> / Tune+            |
|  | Rec         |  | Rec / Rec Mode        |
|  | Play        |  | Play / Slow           |



