




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide / EPG / -/--
 AV	 AV / Input / RDS
 Menu	 Menu / Home
 Swap	 Back / Return
 OK	 OK

Original	Replacement
 Up	 Up
 PR+	 CH+ / Page+
 PR-	 CH- / Page-
 Down	 Down
 Right	 Right
 Vol+	 Vol+
 Left	 Left
 Vol-	 Vol-
 TV/TX	 Text / Goto
 PP	 Fav / Marker / PC
 16:9	 Setup / OPT /
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 [] Smart Controls	 Picture / Format





Original	Replacement	Original	Replacement
 Smart Controls	 Sound / Title		
 MIX))·(( Audio / Lang I/II		
 P100	 Sleep / Timer		
 SUB	 Subtitle / EQ		
 Update	 Zoom / Size		
 Hold	 Stop / Hold		
 Doubl	 Eject / Surround		
 REV	 TV/Radio /		

Original	Replacement	Original	Replacement

