 



 

 

 







 

 



 

 







 









 



















 









Original	Replacement	Original	Replacement
	Power		Power
	3D		Shift + 3
	TV		Shift + 1
	TV		TV/Radio /
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Eco		Display / Media
	0		0
	Source		AV / Input / RDS
	Vol+		Vol+
	Mute		Mute / Dimmer
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Info		Info / Angle
	Option		Setup / OPT /
	Smart Tv		Smart / List
	Guide		Guide / EPG / -/-
	Menu		Menu / Home
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Back		Back / Return
	Down		Down
	Exit		Exit / Cancel / Clear
	Zoom-		Shift + Down





Original	Replacement
Zoom+	+ Shift + Up
@/Home	D.Menu / Top
Sleep	Sleep / Timer
Pre-CH	+ Shift + Back / Return
FAV	Fav / Marker / PC
List	+ Shift + Smart / List
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
OO/Lang	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto
I<	I<< / Preset-
Stop	Stop / Hold
Play	Play / Slow
Pause	Pause / Step / Freeze

Original	Replacement
>	>> / Preset+
<<	<< / Tune-
Rec	Rec / Rec Mode
>>	>> / Tune+

