



Original	Replacement
Source / Eject	Shift + AV / Input / RDS
Power	Power
List	Smart / List
TV	Shift + 1
BD/DVD/VOD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	0
FAV	Fav / Marker / PC

Original	Replacement
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / -/-
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
ECO	TV/Radio /
PR +	CH+ / Page+
Vol -	Vol-
Mute	Mute / Dimmer
PR -	CH- / Page-
Red / A-B	Red / Netflix / Search





Original	Replacement
Source / Eject	Shift + AV / Input / RDS
Source / Eject	Eject / Surround
Power	Power
List	Smart / List
TV	Shift + 1
BD/DVD/VOD	Shift + 2
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
AV	AV / Input / RDS
0 / --	0

Original	Replacement
FAV	Fav / Marker / PC
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Guide	Guide / EPG / -/-
Return	Back / Return
Info	Info / Angle
Vol +	Vol+
ECO	TV/Radio /
PR +	CH+ / Page+
Vol -	Vol-
Mute	Mute / Dimmer
PR -	CH- / Page-



